 


INSTRUCTIONS FOR #80893 & #82709 PLASTIC MODELER'S CHISEL

The chisel is designed to remove unwanted cast-on detail and is super-sharp to perform its job easily. Please be careful during use and if you are concerned of marring your model with the right and left corner edges of this tool, you can round-over these edges with a honing stone ever-so-lightly to prevent it from gouging unlevel areas of your model. Be certain that the chamfered side of the tip is facing the model's surface, as shown below:



CORRECT



INCORRECT

Hold the chisel like a pencil with one hand and support the bottom of the chisel with the thumb of your other hand. In this way, a rocking motion can be achieved which will provide good leverage and tight control of the distance of travel. Practice on some scrap parts before attempting work on your masterpiece. Try not to remove a big chunk of plastic at one time. Several light passes will effectively remove details without gouging the surface. As you approach the finished surface, lighten the force to gently scrape away the last bits of material.

Micro-Mark[®] 340 Snyder Avenue
Berkeley Heights, NJ 07922

MMTechService@micromark.com • www.micromark.com