

NOTICE

CHANGE IN STARTING INSTRUCTIONS FOR #82710 MICROLUX 7 X 14 LATHE

The speed control no longer has an OFF position, so the procedure for starting the lathe has changed from that given in the instruction manual. To start the lathe, please follow the procedure below:

- Check that the red Emergency Stop Button is latched down and that the FORWARD/OFF/REVERSE switch is in the OFF position. (If the machine had been shut down in an emergency, also make sure that any trouble has been cleared from the machine).
- Release the red Emergency Stop Button (slide toward headstock to release). The green lamp should light. The yellow lamp should not be lit. If the yellow lamp is lit, check the switch settings.
- Turn the FORWARD/OFF/REVERSE switch to the desired direction. The lathe will start and quickly ramp up to the speed at which the speed control knob is set.

CORRECTION:

The diagram on page 7 of the Instruction Manual should read 495mm, not 525mm.

