

MITER-RITE™

#15215 INSTRUCTIONS FOR USE

Pin "A," when inserted, locks the saw at 90 degrees. Loosen thumb nuts to remove pin. An extra hole is provided to hold this pin when not in use. An extra pin is provided with your Miter-Rite; it is not a replaceable part.

Do not over-tighten thumb nuts. Very little pressure is required to hold saw guide in position.

The cutting board is packed separately and is held in place with double-sided tape. Peel off paper backing to expose adhesive and place cutting board on Miter-Rite table. If cutting board needs to be replaced in time, a 1/8" thick x 2" wide piece of basswood makes a good substitute for the masonite cutting board included with your Miter-Rite. Rubber cement can also be used as a substitute for double-sided tape.

Replacement Miter-Rite saw blades are available from Micro-Mark (item #22118X2 at www.micromark.com). X-Acto brand saw blades no. 039 or 239 can also be used, but, depending on the date of manufacture, some modification may be required. See illustrations for details.

Apply the 4 rubber feet (included) to the underside corners of the wooden base next to the left and right plastic feet. This will prevent the Miter Rite from slipping during cutting.

The specially designed handle is made so that, when fully inserted, it will stay up and out of the way when positioning stock for cutting.

Adjust tension screws "X" and "Y" so they just barely touch saw blade to create the slightest drag. If the handle is fully inserted and the blade tips down in back, more tension is required on screw "Y."

