

Operating Instructions for #15226 Jigsaw/Scroll Saw

1. Use your Jigsaw with a 12 volt DC power source only.
2. To change saw blade, unplug tool and loosen blade locking screw with tool supplied. Insert saw blade with teeth facing forward and re-tighten locking screw.
3. If blade cannot be inserted into slot, remove locking screw and check for debris in the slot. Clean out as necessary.
4. Saw blades furnished with Jigsaw are for cutting wood or plastic only. Additional blades are available from Micro-Mark.

CAUTION

Always unplug tool before changing saw blades.
Secure work. Use clamps or a vise to hold work whenever possible.
Change saw blades as soon as wear is apparent.
Wear eye protection.
Do not operate tool after taking drugs, alcohol or medications or when you are tired or fatigued.
Keep long hair tied back.
Do not wear loose clothing.
Keep tool out of reach of children.

Micro-Mark®

340 Snyder Avenue, Berkeley Heights, NJ 07922
Tech Support: Tech@micromark.com
www.micromark.com

MM122316

Operating Instructions for #15226 Jigsaw/Scroll Saw

1. Use your Jigsaw with a 12 volt DC power source only.
2. To change saw blade, unplug tool and loosen blade locking screw with tool supplied. Insert saw blade with teeth facing forward and re-tighten locking screw.
3. If blade cannot be inserted into slot, remove locking screw and check for debris in the slot. Clean out as necessary.
4. Saw blades furnished with Jigsaw are for cutting wood or plastic only. Additional blades are available from Micro-Mark.

CAUTION

Always unplug tool before changing saw blades.
Secure work. Use clamps or a vise to hold work whenever possible.
Change saw blades as soon as wear is apparent.
Wear eye protection.
Do not operate tool after taking drugs, alcohol or medications or when you are tired or fatigued.
Keep long hair tied back.
Do not wear loose clothing.
Keep tool out of reach of children.

Micro-Mark®

340 Snyder Avenue, Berkeley Heights, NJ 07922
Tech Support: Tech@micromark.com
www.micromark.com

MM122316

Operating Instructions for #15226 Jigsaw/Scroll Saw

1. Use your Jigsaw with a 12 volt DC power source only.
2. To change saw blade, unplug tool and loosen blade locking screw with tool supplied. Insert saw blade with teeth facing forward and re-tighten locking screw.
3. If blade cannot be inserted into slot, remove locking screw and check for debris in the slot. Clean out as necessary.
4. Saw blades furnished with Jigsaw are for cutting wood or plastic only. Additional blades are available from Micro-Mark.

CAUTION

Always unplug tool before changing saw blades.
Secure work. Use clamps or a vise to hold work whenever possible.
Change saw blades as soon as wear is apparent.
Wear eye protection.
Do not operate tool after taking drugs, alcohol or medications or when you are tired or fatigued.
Keep long hair tied back.
Do not wear loose clothing.
Keep tool out of reach of children.

Micro-Mark®

340 Snyder Avenue, Berkeley Heights, NJ 07922
Tech Support: Tech@micromark.com
www.micromark.com

MM122316

Operating Instructions for #15226 Jigsaw/Scroll Saw

1. Use your Jigsaw with a 12 volt DC power source only.
2. To change saw blade, unplug tool and loosen blade locking screw with tool supplied. Insert saw blade with teeth facing forward and re-tighten locking screw.
3. If blade cannot be inserted into slot, remove locking screw and check for debris in the slot. Clean out as necessary.
4. Saw blades furnished with Jigsaw are for cutting wood or plastic only. Additional blades are available from Micro-Mark.

CAUTION

Always unplug tool before changing saw blades.
Secure work. Use clamps or a vise to hold work whenever possible.
Change saw blades as soon as wear is apparent.
Wear eye protection.
Do not operate tool after taking drugs, alcohol or medications or when you are tired or fatigued.
Keep long hair tied back.
Do not wear loose clothing.
Keep tool out of reach of children.

Micro-Mark®

340 Snyder Avenue, Berkeley Heights, NJ 07922
Tech Support: Tech@micromark.com
www.micromark.com

MM122316