

OPERATING INSTRUCTIONS FOR #70224 RIPPING GAUGES

To use, place the appropriate size gauge against the saw blade. Then slide the rip fence up to gauge and tighten holding knob on rip fence. Remove gauge and you've automatically set your fence for the size strip you need.

Note that the gauges are color coded with a narrow stripe near the end for quick identification as follows:

SIZE	COLOR
1/16" x 1/16"	.Red
3/32" x 3/16"	.Black
1/8" x 1/4"	.Blue
5/32" x 5/16"	.Green
3/16" x 3/8"	.Purple
1/16" x 1/2"	.Brown

For other widths, use 2 or more gauges in combination.
For example, for 9/16" spacing, use the 5/16" and 1/4" side-by-side.

**CAUTION: Never push stock past the blade with your fingers.
Always use a push stick.**

Micro-Mark[®] 340 Snyder Avenue
Berkeley Heights, NJ 07922

Tech Support: 908-464-1094
www.micromark.com MMTechService@micromark.com

MM122904

OPERATING INSTRUCTIONS FOR #70224 RIPPING GAUGES

To use, place the appropriate size gauge against the saw blade. Then slide the rip fence up to gauge and tighten holding knob on rip fence. Remove gauge and you've automatically set your fence for the size strip you need.

Note that the gauges are color coded with a narrow stripe near the end for quick identification as follows:

SIZE	COLOR
1/16" x 1/16"	.Red
3/32" x 3/16"	.Black
1/8" x 1/4"	.Blue
5/32" x 5/16"	.Green
3/16" x 3/8"	.Purple
1/16" x 1/2"	.Brown

For other widths, use 2 or more gauges in combination.
For example, for 9/16" spacing, use the 5/16" and 1/4" side-by-side.

**CAUTION: Never push stock past the blade with your fingers.
Always use a push stick.**

Micro-Mark[®] 340 Snyder Avenue
Berkeley Heights, NJ 07922

Tech Support: 908-464-1094
www.micromark.com MMTechService@micromark.com

MM122904

OPERATING INSTRUCTIONS FOR #70224 RIPPING GAUGES

To use, place the appropriate size gauge against the saw blade. Then slide the rip fence up to gauge and tighten holding knob on rip fence. Remove gauge and you've automatically set your fence for the size strip you need.

Note that the gauges are color coded with a narrow stripe near the end for quick identification as follows:

SIZE	COLOR
1/16" x 1/16"	.Red
3/32" x 3/16"	.Black
1/8" x 1/4"	.Blue
5/32" x 5/16"	.Green
3/16" x 3/8"	.Purple
1/16" x 1/2"	.Brown

For other widths, use 2 or more gauges in combination.
For example, for 9/16" spacing, use the 5/16" and 1/4" side-by-side.

**CAUTION: Never push stock past the blade with your fingers.
Always use a push stick.**

Micro-Mark[®] 340 Snyder Avenue
Berkeley Heights, NJ 07922

Tech Support: 908-464-1094
www.micromark.com MMTechService@micromark.com

MM122904

OPERATING INSTRUCTIONS FOR #70224 RIPPING GAUGES

To use, place the appropriate size gauge against the saw blade. Then slide the rip fence up to gauge and tighten holding knob on rip fence. Remove gauge and you've automatically set your fence for the size strip you need.

Note that the gauges are color coded with a narrow stripe near the end for quick identification as follows:

SIZE	COLOR
1/16" x 1/16"	.Red
3/32" x 3/16"	.Black
1/8" x 1/4"	.Blue
5/32" x 5/16"	.Green
3/16" x 3/8"	.Purple
1/16" x 1/2"	.Brown

For other widths, use 2 or more gauges in combination.
For example, for 9/16" spacing, use the 5/16" and 1/4" side-by-side.

**CAUTION: Never push stock past the blade with your fingers.
Always use a push stick.**

Micro-Mark[®] 340 Snyder Avenue
Berkeley Heights, NJ 07922

Tech Support: 908-464-1094
www.micromark.com MMTechService@micromark.com

MM122904

OPERATING INSTRUCTIONS FOR #70224 RIPPING GAUGES

To use, place the appropriate size gauge against the saw blade. Then slide the rip fence up to gauge and tighten holding knob on rip fence. Remove gauge and you've automatically set your fence for the size strip you need.

Note that the gauges are color coded with a narrow stripe near the end for quick identification as follows:

SIZE	COLOR
1/16" x 1/16"	.Red
3/32" x 3/16"	.Black
1/8" x 1/4"	.Blue
5/32" x 5/16"	.Green
3/16" x 3/8"	.Purple
1/16" x 1/2"	.Brown

For other widths, use 2 or more gauges in combination.
For example, for 9/16" spacing, use the 5/16" and 1/4" side-by-side.

**CAUTION: Never push stock past the blade with your fingers.
Always use a push stick.**

Micro-Mark[®] 340 Snyder Avenue
Berkeley Heights, NJ 07922

Tech Support: 908-464-1094
www.micromark.com MMTechService@micromark.com

MM122904

OPERATING INSTRUCTIONS FOR #70224 RIPPING GAUGES

To use, place the appropriate size gauge against the saw blade. Then slide the rip fence up to gauge and tighten holding knob on rip fence. Remove gauge and you've automatically set your fence for the size strip you need.

Note that the gauges are color coded with a narrow stripe near the end for quick identification as follows:

SIZE	COLOR
1/16" x 1/16"	.Red
3/32" x 3/16"	.Black
1/8" x 1/4"	.Blue
5/32" x 5/16"	.Green
3/16" x 3/8"	.Purple
1/16" x 1/2"	.Brown

For other widths, use 2 or more gauges in combination.
For example, for 9/16" spacing, use the 5/16" and 1/4" side-by-side.

**CAUTION: Never push stock past the blade with your fingers.
Always use a push stick.**

Micro-Mark[®] 340 Snyder Avenue
Berkeley Heights, NJ 07922

Tech Support: 908-464-1094
www.micromark.com MMTechService@micromark.com

MM122904