

#81858 Sword Saw Instructions for Use

Power Supply

Your Sword Saw comes ready for use. It should be used with a 12VDC power supply only. We recommend our #84317 Heavy Duty Variable Speed Transformer; it contains a speed control plus special circuitry that maintains power at low speeds.

Operation

Your Sword Saw has been designed for hobby/craft use and it will cut soft wood, plastic and similar materials quickly and easily. If you wish to use it on hard wood, please do not force the tool through the workpiece; give it time to cut properly.

Blade Replacement

#81859 Replacement blades are supplied in color-coded pairs. A pair consists of one yellow-colored blade and one black-colored blade (the teeth face in opposite directions). Replace the pair of blades in your Sword Saw with a new pair as follows:

- Remove the nose cone from the Sword Saw by gently twisting it off.
- Loosen the two clamp screws and slide out the old blades. Insert the new blades all the way into the clamps and tighten the screws.
- Replace the nose cone by pressing it back onto the Sword Saw.
- Check for proper operation.

Precautions

Always unplug tool before changing saw blades.

Secure work. Use clamps or a vise to hold work whenever possible.

Change saw blades as soon as wear is apparent.

Wear eye protection.

Do not operate tool after taking drugs, alcohol or medications or when you are tired or fatigued.

Keep long hair tied back.

Do not wear loose clothing.

Keep tool out of reach of children.

Micro-Mark®
THE SMALL TOOL SPECIALISTS

340 Snyder Avenue, Berkeley Heights, NJ 07922
Tech Support: Tech@micromark.com
www.micromark.com

MM122316

#81858 Sword Saw Instructions for Use

Power Supply

Your Sword Saw comes ready for use. It should be used with a 12VDC power supply only. We recommend our #84317 Heavy Duty Variable Speed Transformer; it contains a speed control plus special circuitry that maintains power at low speeds.

Operation

Your Sword Saw has been designed for hobby/craft use and it will cut soft wood, plastic and similar materials quickly and easily. If you wish to use it on hard wood, please do not force the tool through the workpiece; give it time to cut properly.

Blade Replacement

#81859 Replacement blades are supplied in color-coded pairs. A pair consists of one yellow-colored blade and one black-colored blade (the teeth face in opposite directions). Replace the pair of blades in your Sword Saw with a new pair as follows:

- Remove the nose cone from the Sword Saw by gently twisting it off.
- Loosen the two clamp screws and slide out the old blades. Insert the new blades all the way into the clamps and tighten the screws.
- Replace the nose cone by pressing it back onto the Sword Saw.
- Check for proper operation.

Precautions

Always unplug tool before changing saw blades.

Secure work. Use clamps or a vise to hold work whenever possible.

Change saw blades as soon as wear is apparent.

Wear eye protection.

Do not operate tool after taking drugs, alcohol or medications or when you are tired or fatigued.

Keep long hair tied back.

Do not wear loose clothing.

Keep tool out of reach of children.

Micro-Mark®
THE SMALL TOOL SPECIALISTS

340 Snyder Avenue, Berkeley Heights, NJ 07922
Tech Support: Tech@micromark.com
www.micromark.com

MM122316

#81858 Sword Saw Instructions for Use

Power Supply

Your Sword Saw comes ready for use. It should be used with a 12VDC power supply only. We recommend our #84317 Heavy Duty Variable Speed Transformer; it contains a speed control plus special circuitry that maintains power at low speeds.

Operation

Your Sword Saw has been designed for hobby/craft use and it will cut soft wood, plastic and similar materials quickly and easily. If you wish to use it on hard wood, please do not force the tool through the workpiece; give it time to cut properly.

Blade Replacement

#81859 Replacement blades are supplied in color-coded pairs. A pair consists of one yellow-colored blade and one black-colored blade (the teeth face in opposite directions). Replace the pair of blades in your Sword Saw with a new pair as follows:

- Remove the nose cone from the Sword Saw by gently twisting it off.
- Loosen the two clamp screws and slide out the old blades. Insert the new blades all the way into the clamps and tighten the screws.
- Replace the nose cone by pressing it back onto the Sword Saw.
- Check for proper operation.

Precautions

Always unplug tool before changing saw blades.

Secure work. Use clamps or a vise to hold work whenever possible.

Change saw blades as soon as wear is apparent.

Wear eye protection.

Do not operate tool after taking drugs, alcohol or medications or when you are tired or fatigued.

Keep long hair tied back.

Do not wear loose clothing.

Keep tool out of reach of children.

Micro-Mark®
THE SMALL TOOL SPECIALISTS

340 Snyder Avenue, Berkeley Heights, NJ 07922
Tech Support: Tech@micromark.com
www.micromark.com

MM122316