

INSTRUCTIONS FOR USE

#84519 DIGITAL LEVEL AND GRADE GAUGE

- Press **On/Off** to turn on the gauge. Note that **LEVEL** is indicated in the upper left corner of the display, meaning current readings are based on Sea Level (important for model railroad track grade measurements).
- To switch between degrees and percent grade, press %-°.
- For machinery set up, you'll want to know the relative angle between machine parts, such as table and blade. Attach the level to the machine, press **Relative Zero** (**LEVEL** will disappear) and adjust the machine components the desired amount.
- To switch back to sea level, press and hold the **On/Off** button (about 3 seconds) until **LEVEL** reappears in the upper left corner of the display.
- To retain a reading, press the **Hold** button. You can now move the gauge for easier viewing. Press **Hold** again to restore normal operation.
- To change the battery (9v), use the included mini screwdriver to remove the rear cover. Be sure to reinstall any card spacers that keep the battery in good contact with the electrical connections.
- To turn off the gauge, press the **On/Off** button while **LEVEL** is displayed.

Note: The instrument may be used upside-down. The display will automatically adjust to the new position.

Micro-Mark[®] 340 Snyder Avenue
Berkeley Heights, NJ 07922

Tech Support: 908-464-1094, weekdays, 1 pm to 5 pm ET
www.micromark.com MMTechService@micromark.com