 


XT8011 HOLE DRILL

 
Drill perfect holes in suitable cosplay material using one of the three interchangeable quick-change drill tips included. Choose 1/4", 1/2", 3/4" (7mm, 12.7mm, 19mm) diameters. The Hole Drill works with 3/16th" (5mm) suitable material.

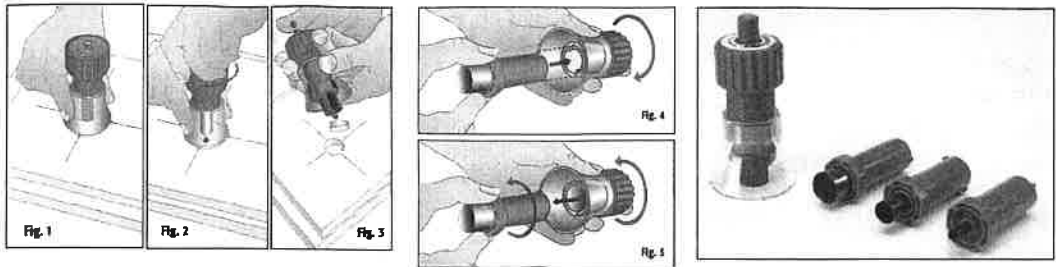

*Use underlayment (such as foamboard) when cutting.

XTC6010 STRAIGHT/BEVEL CUTTER

Economy and versatility combine in the Cos-Tools Straight/Bevel. Simply rotate the angled base block and the Model XTC6010 transforms a straight cutter to a bevel cutter. Features include adjustable blade depth, ergonomic handle and onboard blade storage. The Straight/Bevel Cutter works with 3/16th" (5mm) suitable material. Use replacement blades WC-5 or WC-20.

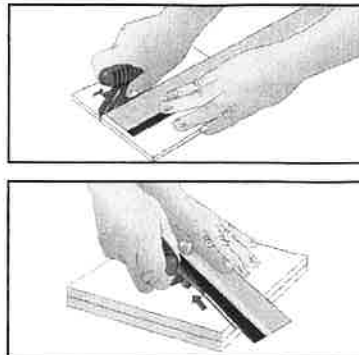


Use blade:
WC-5,
WC-20

*Use underlayment (such as foamboard) when cutting.



XTB6020 FREESTYLE CUTTER

 Cut free form shapes with this innovative push-style cutter. Easy to use, just insert the blade into the material and push to follow the desired shape. Features ergonomic handle, on-board blade storage compartment, blade safety shield and two blades. The freestyle Cutter works with 3/16th" (5mm) suitable material. Use replacement blades WB-5 or WB-20.

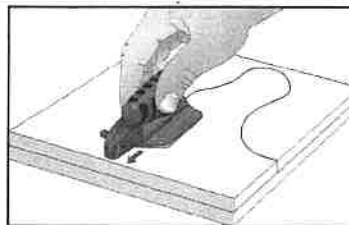



Use blade:
WB-5,
WB-20

*Use underlayment (such as foamboard) when cutting.



XT3001 CHANNEL RAIL

  The Channel Rail is used in combination with the Cos-Tools Straight/Bevel Cutter, Straight Cutter, and V-Groove Cutter. Simply attach one of the cutters to the Channel Rail, for straight clean cuts. Features include a straight edge to guide your cuts, and a ruler to measure them. The Channel Rail works with XTC6001 Straight Cutter, XTC2001 Groove Cutter, and XTC6010 Straight/Bevel Cutter.

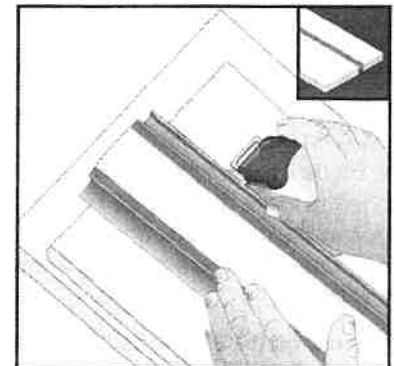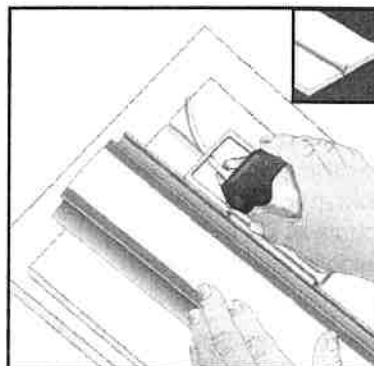


INSTRUCTIONS

CIRCLE CUTTER

MODEL XTA-8001

 CAUTION: BLADES EXTREMELY SHARP
Use replacement blades #WA-5 or WA-20

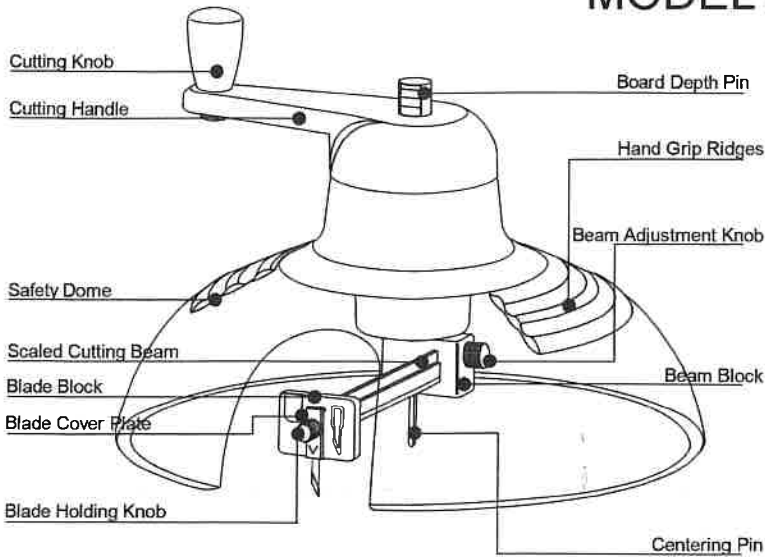

Cutting Knob - Knob attached to the Cutting Handle, used to turn the Scaled Cutting Beam and blade.
Cutting Handle - Turns the Scaled Cutting Beam and blade.
Safety Dome - Clear Acrylic dome with Hand Grip Ridges that protects the user from sharp blade while allowing clear viewing of blade progression.
Scaled Cutting Beam - Adjustable, scaled beam that is set for desired circle diameter cut, also hold blade assembly.
Blade Block - Holds blade in place.
Blade Cover Plate - Placed between the blade holding knob and the cutting blade, the blade cover plate holds the blade firmly against the Blade Block.
Board Depth Pin - Pin lowers inside center of cutting mechanism as the blade lowers, showing how deep the blade has progressed through the cut.
Hand Grip Ridges - Ridges on Safety Dome to firmly hold Circle Cutter with.
Beam Adjustment Knob - Knob to hold Scaled Cutting Beam in place, loosen knob to slide beam and set circle diameter.
Beam Block - Holds Scaled Cutting Beam, scale is read to the left of the block.
Centering Pin - Pin marking center of resulting circle cut, does not damage foam board surface.

OPERATING INSTRUCTIONS

 
 
 
 
 
BLADE INSTALLATION

- 1 Loosen Beam Adjustment Knob and remove the Scaled Cutting Beam. OR center the Blade Block in the opening of the Safety Dome for easy access.
- 2 Remove the blade holding knob and Blade Cover Plate. Position the new blade in the blade channel, being careful to match the blade's position to the blade icon shown on the Blade Block.
- NOTE: A magnet in the blade channel will help to position the blade.
- 3 Replace the Blade Cover Plate with arrow pointing down, and reattach the blade holding knob (Fig. 1). If you remove the Scaled Cutting Beam, replace it now.

CUTTING

NOTE: Always protect the tabletop with a scrap piece of foamboard underneath the material being cut.

- 1 Loosen the Beam Adjustment Knob and set the Scaled Cutting Beam to the desired circle diameter. Read the Scale to the right of the Beam Block. Tighten the Beam Adjustment Knob (Fig. 2).
- 2 Make sure the blade is in the highest position by turning the Cutting Knob on the Cutting Handle counterclockwise.
- 3 Position the centering pin on the desired location. Grip the Circle Cutter with one hand on the Hand Grip Ridges, the other hand on the Cutting Knob. Turn the Cutting Handle clockwise in a continuous motion (Fig. 3) The Board Depth Pin will lower the same depth as the blade progressing through the board. You will feel additional resistance as the blade reaches the scrap foam board under your work. Your circle cut is now complete.
- 4 Before setting down the cutter, stand the Circle Cutter on its side. With one hand on the Hand Grip Ridges, turn the cutting knob in a counterclockwise position until the blade returns to the highest position (Fig. 4).

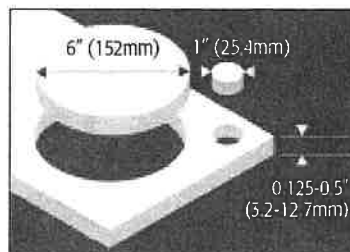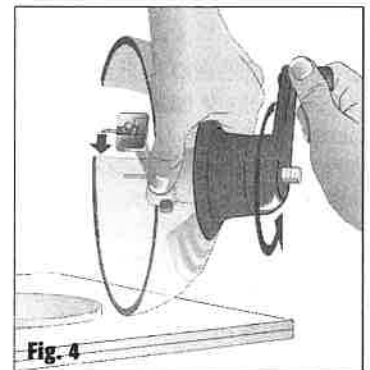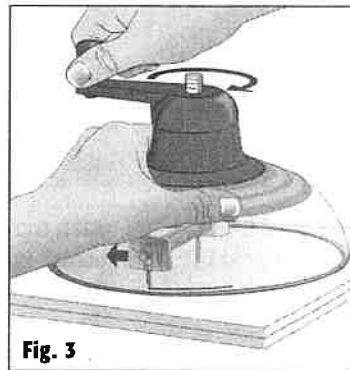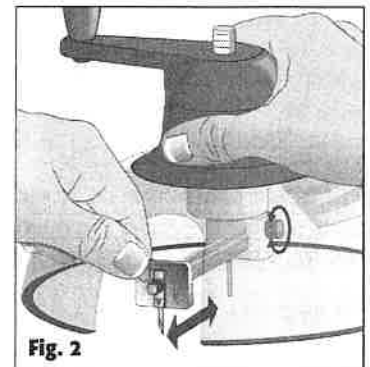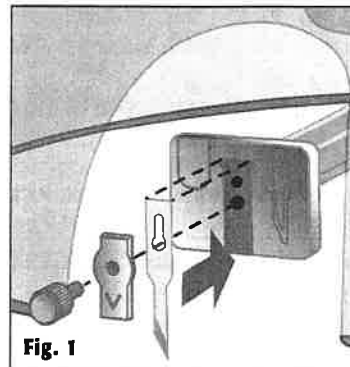

Cuts material from 1" to 6"
(25.44 to 152mm), and depths of
1/8" to 1/2" (3.2 to 12.7mm).

SAFETY NOTE: Keep fingers clear of the blade area, especially when the Scaled Cutting Beam is in motion.

 
 
*Use underlayment (such as foamboard) when cutting.

INSTRUCTIONS

STRAIGHT CUTTER

MODEL XTC-6001

CAUTION: BLADES EXTREMELY SHARP
Use replacement blades #WC-5 or WC-20

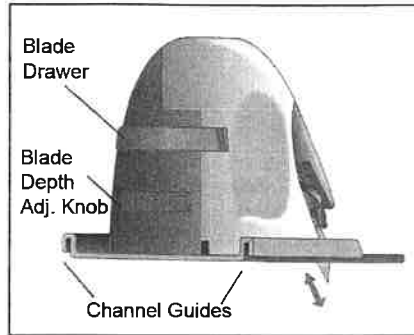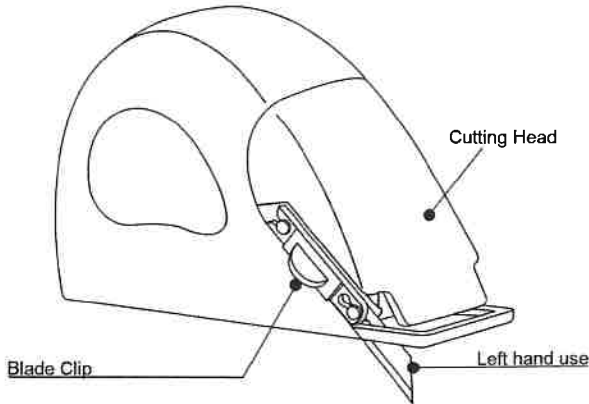

Blade Storage Drawer - Located on the rear of the tool, used to store extra blades
Channel Guide - Clips onto the Channel Rail (XT-3001) to create accurate, straight cuts
Blade Clip - Used to hold blade in place
Cutting Head - Flexible head that holds blade and is depressed to make cut
Blade Depth Adjustment Knob - Raises and lowers blade, which varies the total depth of the cut

OPERATING INSTRUCTIONS

BLADE INSTALLATION

Determine left or right hand use. Blade on the right side is for left handed use. Blade on the left side is for right handed use. Remove yellow Blade Clip by pushing the clip forward. Place the blade in the blade depression, matching the blade tip with the angle in the indentation. Replace the Blade Clip, taking care to position the open end of the clip to the top. Slide upwards until the clip snaps into place (Fig. 1).

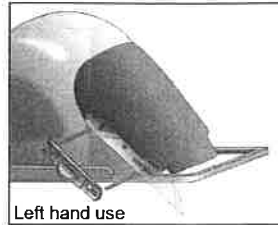 


Fig. 1

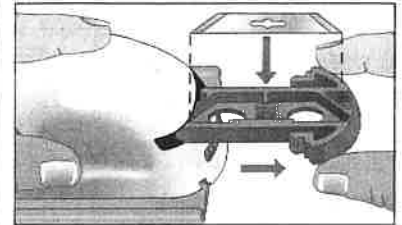 


Fig. 2

OTE: Spare blades can be stored in the Blade Storage Drawer, located on the back side of the cutter. To open, squeeze the Blade Storage Drawer equally from left to the right with fingers placed on the drawer ridges (Fig. 2).

CUTTING

NOTE: Always protect the tabletop with a scrap piece of foamboard underneath the material being cut.

SAFETY NOTE: Keep fingers clear of the blade area. Using the XTD3001 Channel Rail (sold separately, or use the Logan Adapt-A-Rule or team System), lightly mark the material to indicate where to cut.

Position the Channel Rail on the material on the cut line. Hook the cutter onto the Channel Guide. With the blade positioned off the top edge of the material, push the Cutting Head downward. With the Cutting Head fully depressed, pull the cutter backwards along the Channel Rail and continue along the length of the material (Fig. 3).

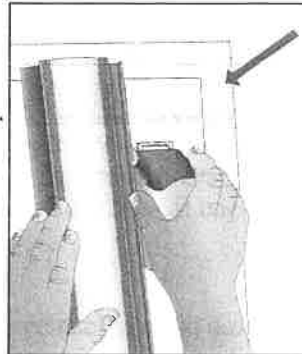 


Fig. 3

BLADE DEPTH SETTING

The blade can be raised or lowered by turning the Blade Adjustment Knob found on the back side of the cutter (Fig. 4). On the bottom of the cutter, the Blade Depth Position Scale provides a rough guide to the blade depth position (Fig. 5). Sizes up to 1/2" (13mm) suitable material.

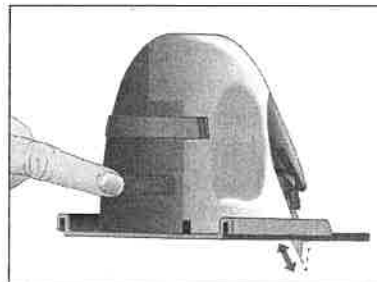 


Fig. 4

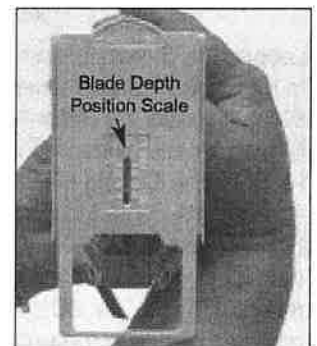 


Fig. 5

 
 
Use underlayment (such as foamboard) when cutting.

INSTRUCTIONS

V-GROOVE CUTTER

MODEL XTC-2001

CAUTION: BLADES EXTREMELY SHARP
Use replacement blades #WC-5 or WC-20

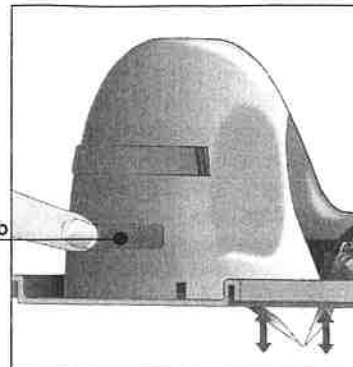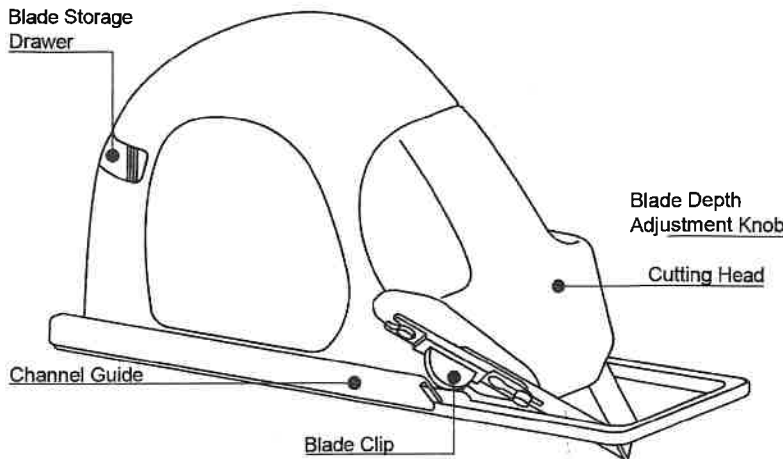



Blade Storage Drawer - Located on the rear of the tool, used to store extra blades

Channel Guide - Clips onto the Channel Rail (XT-3001) to create accurate, straight cuts

Blade Clip - Used to hold blade in place

Cutting Head - Flexible head that holds blade and is depressed to make cut

  Blade Depth Adjustment Knob - Raises and lowers blade, which varies the total depth of the V-groove

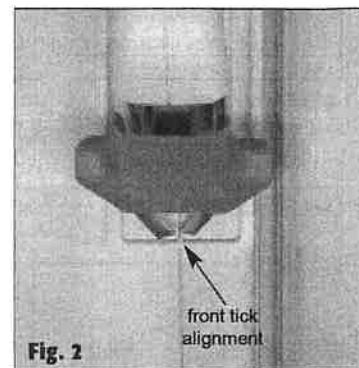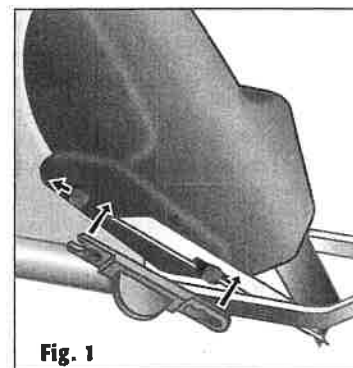

OPERATING INSTRUCTIONS

BLADE INSTALLATION

 
 
- 1 Remove yellow Blade Clip by pushing the clip forward.
- 2 Place the blade in the blade depression, matching the blade tip with the angle in the indentation.
- 3 Replace the Blade Clip, taking care to position the open end of the clip to the top. Slide upwards until the clip snaps into place (Fig. 1).
- 4 Repeat for the blade on opposite side.

NOTE: Spare blades can be stored in the Blade Storage Drawer, located on the back side of the cutter. To open, squeeze the Blade Storage Drawer equally from left to the right with fingers placed on the drawer ridges.

CUTTING




NOTE: Always protect the tabletop with a scrap piece of foamboard underneath the material being cut.

- 1 SAFETY NOTE: Keep fingers clear of the blade area.
- 2 Using the XTD3001 Channel Rail (sold separately, or use the Logan Adapt-A-Rule or team System), lightly mark the material to indicate where to cut.
- 3 Position the Channel Rail on the material. Hook the cutter on the Channel Guide. Align the tick marks located on the front and back of the cutter with the previously marked line (Fig. 2 & Fig. 3).
- 4 With the blade positioned off the top edge of the material, push the Cutting Head downward. With the Cutting Head fully depressed, pull the cutter backwards along the Channel Rail and continue along the length of the material (Fig. 4).

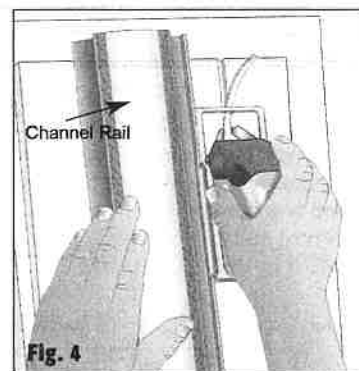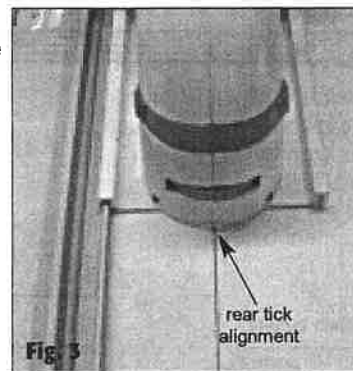

BLADE DEPTH SETTING

   - 1 The blade can be raised or lowered by turning the Blade Adjustment Knob found on the back side of the V-Groove Cutter (Fig. 5).
- 2 Turn the Blade Adjustment Knob to the right to raise the blades, or to the left to lower the blades. Look at the bottom of the V-Groove Cutter, follow the directional arrows. On the bottom of the cutter, the blade depth position scale provides a rough guide to the blade depth position (Fig. 6).

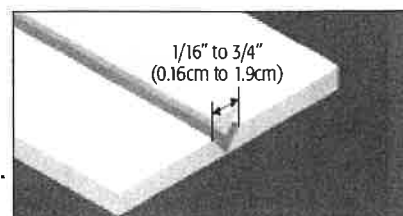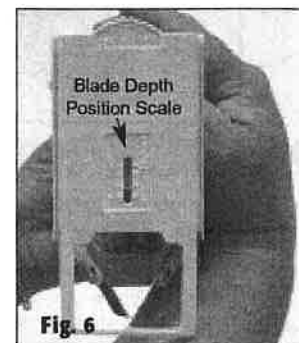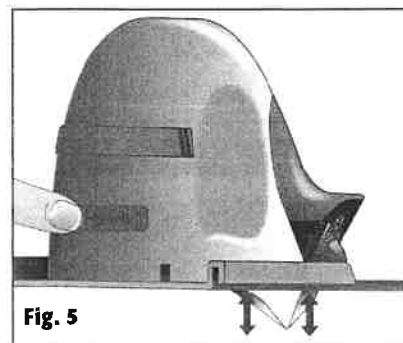






Cuts V-Grooves into suitable material with resulting 1/16" to 3/4" wide (1.6mm to 19mm).

TIP: At some settings, the V-Groove Cutter may cut completely through the material. If this is NOT the effect you desire, be sure to do a test cut prior to your final cut. Note that the V-Groove Cutter cannot cut completely through 1/2" material (13mm).

Cutting and Shaping Tools

XTD30 KNIFE

     Cut straight lines, free form shapes, or beveled cuts with this hand held utility knife. Features include adjustable depth, snap off blade, blade safety shield and solid locking mechanism for consistent depth setting. Use replacement blades XTD-10.

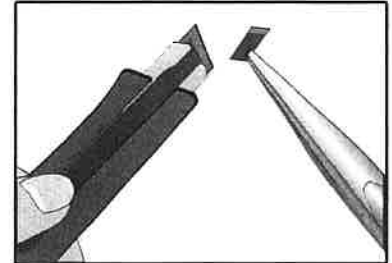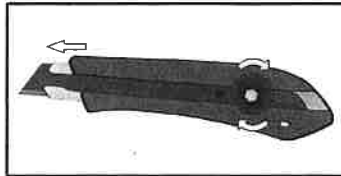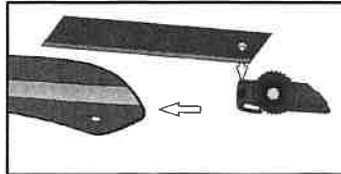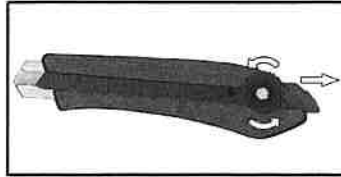

Use blade:
XTD-10

CAUTION: BLADES EXTREMELY SHARP
KEEP OUT OF REACH OF CHILDREN

Always use scrap underlayment (such as foamboard) when cutting.

J1917