


NeoRuler

QUICKSTART GUIDE


Model : N01 | Ver:1.3

Basic

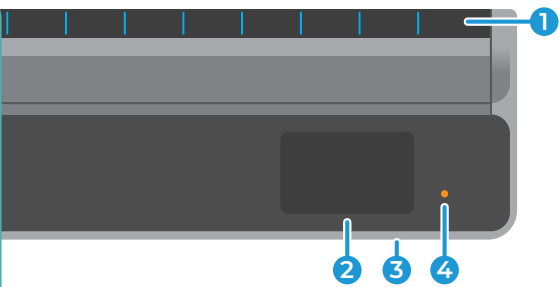


- ① LED Marks
- ② Screen
- ③ USB-C Charging Port
- ④ Charging Light

- NeoPointer ⑤
- Back / ON-OFF ⑥
- Select Button ⑦
- Switch Button ⑧

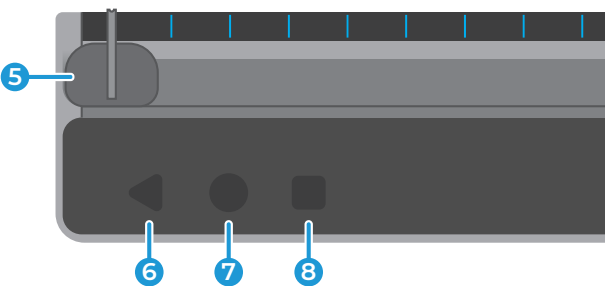

Start to use

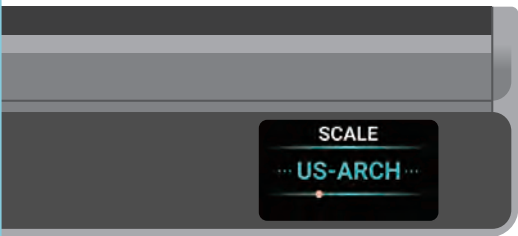

NeoRuler has 93 built-in scales distributed in 8 scale modes. Select the default scale mode before use, and switch it in the setting menu.

41 Built-in Metric Scales

Arch	ENG I	ENG II	MAP
1			
1/2	1/25	1/1000	1/100k
1/3	1/50	1/250	1/25k
1/4	1/200	1/500	1/200k
1/5	1/250	1/625	1/250k
1/10	1/300	1/2000	1/500k
1/20	1/400	1/2500	1/1000k
1/25	1/500	1/5000	1/2000k
1/30		1/6000	1/2500k
1/40		1/10k	
1/50		1/12.5k	
1/72		1/20k	
1/75		1/25k	
1/100		1/50k	


52 Built-in US Standard Scales

Arch	ENG I	ENG II	MAP
1 = 1			
6" = 1	1' = 10'	1' = 300'	1' = 1Mi
4" = 1	1' = 20'	1' = 333'	1' = 1.5 Mi
3" = 1	1' = 30'	1' = 416.6'	1' = 2 Mi
2" = 1	1' = 40'	1' = 500'	1' = 3 Mi
1 1/2" = 1	1' = 50'	1' = 583.3'	1' = 4 Mi
1" = 1	1' = 60'	1' = 600'	1' = 5 Mi
3/4" = 1	1' = 70'	1' = 625'	1' = 6 Mi
1/2" = 1	1' = 80'	1' = 666'	1' = 10 Mi
3/8" = 1	1' = 83.3'	1' = 750'	1' = 20 Mi
1/4" = 1	1' = 90'	1' = 1000'	1' = 24 Mi
3/16" = 1	1' = 100'	1' = 1200'	1' = 25 Mi
1/8" = 1	1' = 166.6'	1' = 2000'	
3/32" = 1	1' = 200'	1' = 3000'	
1/16" = 1	1' = 250'		


Calibration



When the calibration notification shows up, move the NeoPointer to the left for calibration. When finished, click any button to return.

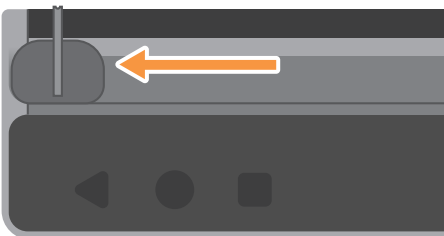


Main menu

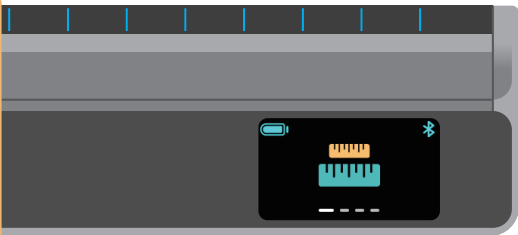

- 2 sec > ON/OFF
- Select
- Switch Function
- 5 min > Sleep, 2 hr > OFF
- 1.5-2 hrs > 100%

Scale Ruler

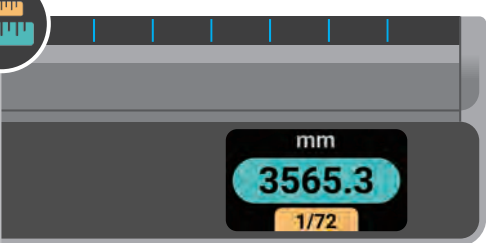






- *1 Back to zero / *2 Main Menu
- Bluetooth Send / Select Scale / Select Unit
- Switch (length / scales / unit)

Scale Setting

The spacing between the LED Mark (1) changes when changing the scale. The distance indicator (2) represents the actual scaled length between two marks.


- Back to measure
- Switch Scales

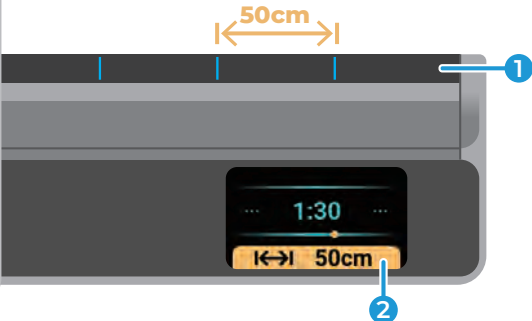

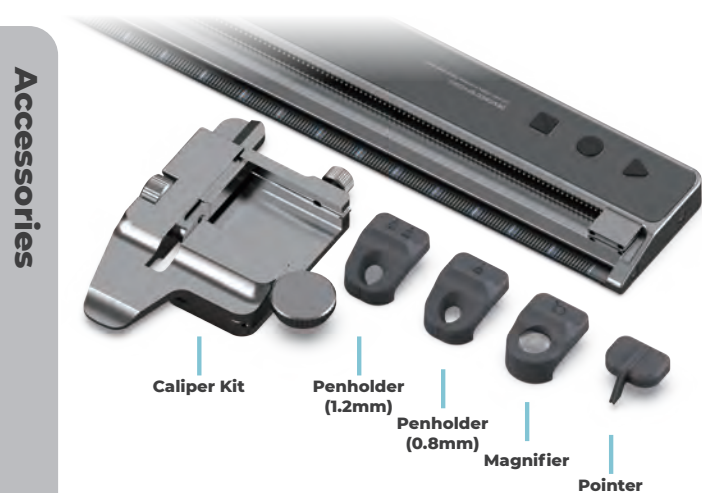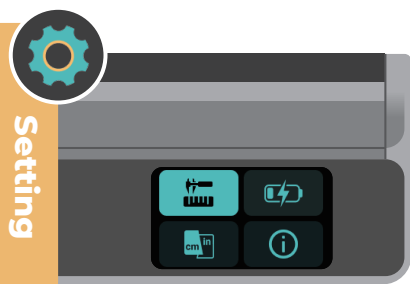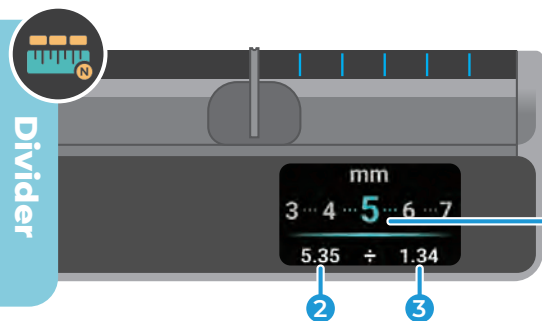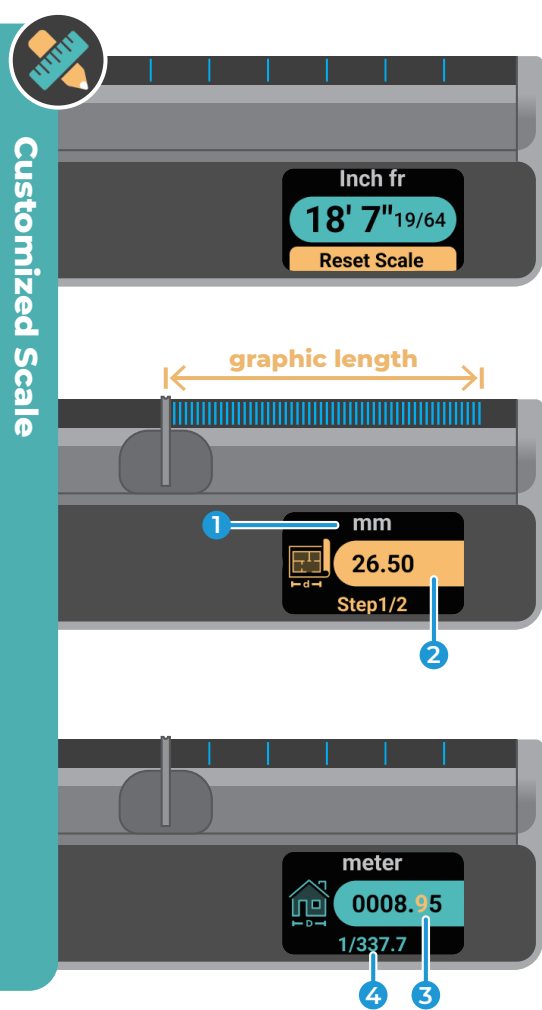


NeoRuler's slider uses a modular snap design that allows you to easily replace the slider pointer or other functional accessories. For more information, please visit the HOZO DESIGN official website."

*The accessories shown on this page are not included and need to be purchased separately.

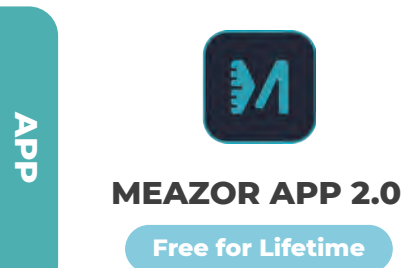

Download MEAZOR APP to enhance your experience with NeoRuler, Include Data transfer, List mode, Drawing, and much more! Free for lifetime use and Available to download in Apple APP Store and Google Play Store.

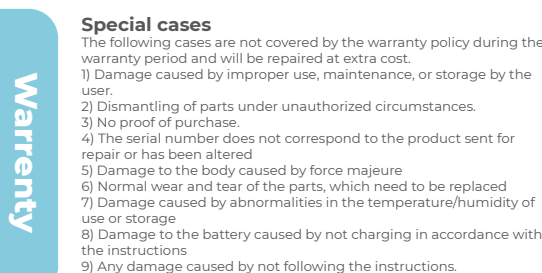

Warranty period
HOZO Design. CO. - One-year Limited Consumer Warranty covers your product against manufacturing defects for one year from the date you bought your product.

How to send it for repair?
If the product needs to be repaired, please contact the distributor and send the product accordingly, and provide a valid **device number** with proof of purchase.

contact us: support@hozodesign.com



◀ *1 Zero / *2 Main Menu

● Bluetooth Send / Reset Scale / Select Unit

■ Switch (length / scales / unit)

Step 1 | Measure Graphic Length

The principle of customized scale is to measure a section of graphic length corresponding to its actual distance

① Unit of Graphic Length ② Graphic Length

◀ Back to measure

■ Switch Section

Step 2 | Input Actual Distance

Use the pointer or press the ● button to increase the value of the actual length. Press the ■ button to switch between different digits and units.

③ Actual Distance

④ Calculated Scale

■ Switch digits/Sections

● Add value

Divider allows the user to divide a certain distance (slider's distance) into 2-12 sections.

① # of division

◀ Main Menu

② Total Length

● Change # of division

③ Section Length

■ Switch Section


Mode
(Normal/Caliper)

Battery
Normal/ Performance
* In performance mode, NeoRuler does not go into standby or power off

Scale
(8 Scale Modes)

Info

Place the NeoRuler flat on the desktop when replacing the module, and gently push the pointer forward. Then put the new accessory into the slot.

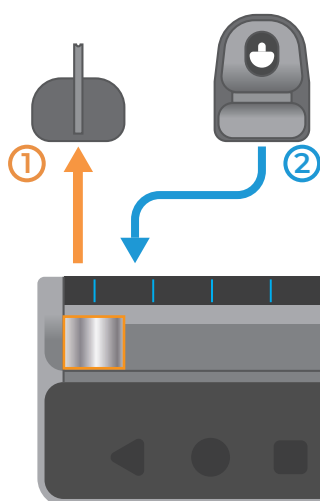

USER INSTRUCTIONS

Access to detailed multilingual instruction manuals, FAQ & Instruction video in: English | Chinese | Japanese | German | Spanish | Italian | French



a) Download MEAZOR APP to view

b) Scan the QR code with web browser to view online

Contact US

Online form: www.hozodesign.com/contact
Support Email: support@hozodesign.com

Copyright

The above product specifications are subject to change without notice. All rights of interpretation are reserved by HOZO DESIGN CO. All trademarks, images, technical data, and intellectual property rights are the properties of HOZO DESIGN CO., Limited and are subject to copyright infringement.

