



## #84048 SAND IT • TIPS AND TRICKS FOR USE

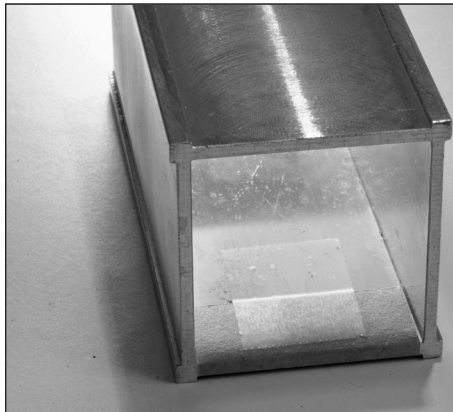

Cut sandpaper into a strip 1-1/4" wide by 5" long. Wrap tightly around the aluminum block and secure with tape as shown in the picture at left, or with rubber cement. We suggest 180 grit for most sanding needs, but you can use various grits on the four sides of the block to suit your work.

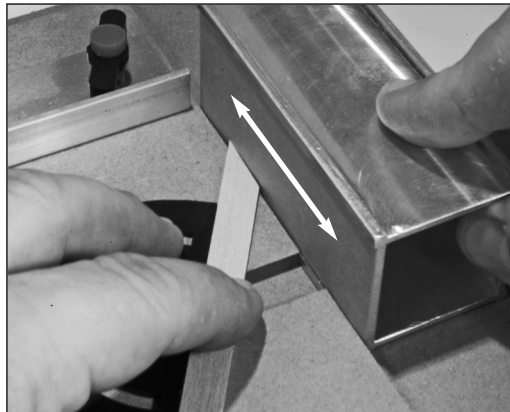

Set the miter gauge to the desired angle and position the workpiece against the sanding block. Slide the block gently back and forth (in the direction of the arrows shown in the picture) to sand the end of the workpiece. For accuracy, be sure to hold the block in contact with the edges of the upper table surface.



The end of a workpiece can be sanded square by placing the strip against the fence as shown.



Use the provided angle gauges to sand ends to common angles. You may also use the right angle gauge as a "stop" to sand strips to precisely the same length.

**Micro-Mark**<sup>®</sup> 340 Snyder Avenue  
Berkeley Heights, NJ 07922

Tech Support: 908-464-1094, 1pm–5pm ET  
www.micromark.com MMTechService@micromark.com

**WARNING!** Use of this tool on certain materials (e.g.: walnut) may expose the user to chemicals known by the state of California to cause cancer and birth defects or other reproductive harm.