




ASSEMBLY / INSTALLATION OF #84747 HEAVY DUTY FENCE

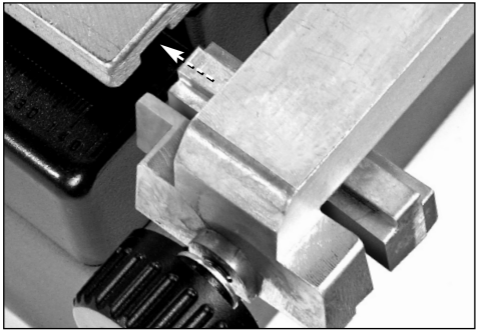


Remove the fence that comes with the saw. Loosen the lock nut of the heavy duty fence. Locate the groove under the front edge of the saw table and slide the corresponding part of the heavy duty fence into it.

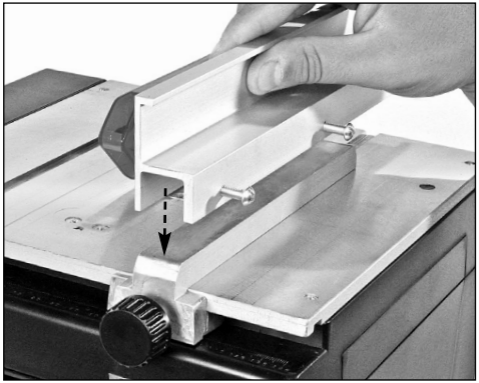

Lock the heavy duty fence temporarily in place. Place the high fence attachment onto the heavy duty fence.

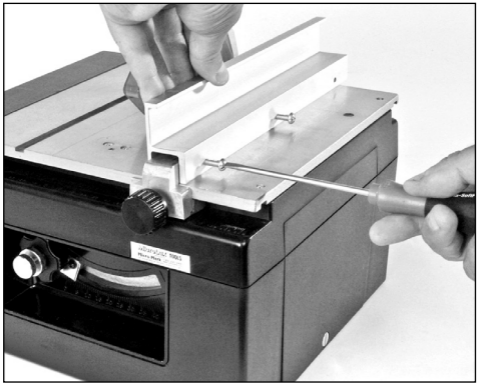

While holding the high fence in contact with the saw table, tighten set screws...gently, but securely. Do not cause the fence to warp.

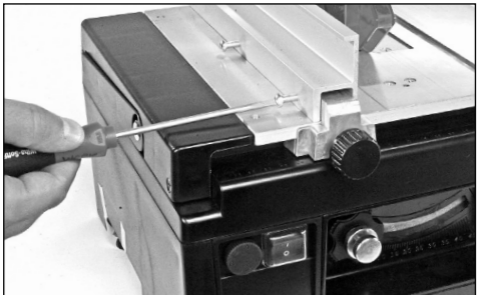

Reposition fences as needed to suit the job at hand.

Micro-Mark[®]

THE SMALL TOOL SPECIALISTS

340 Snyder Avenue, Berkeley Heights, NJ 07922

Tech Support: 908-464-1094, weekdays, 1pm to 5pm ET

www.micromark.com MMTechService@micromark.com

MM090110