


#14162 STAINLESS STEEL STRAIGHT EDGE

To keep straight edge from slipping apply sandpaper to bottom as shown below. Cut sandpaper into 2 pieces.

Peel off backing and press in place.

Note: clean oil residue from straight edge with a clean cloth to assure proper adhesion of sandpaper.

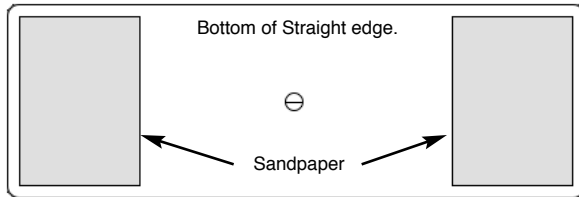

Micro-Mark[®] 340 Snyder Avenue
Berkeley Heights, NJ 07922


Tech Support: 908-464-1094
www.micromark.com MMTechService@att.net

#14162 STAINLESS STEEL STRAIGHT EDGE

To keep straight edge from slipping apply sandpaper to bottom as shown below. Cut sandpaper into 2 pieces.

Peel off backing and press in place.

Note: clean oil residue from straight edge with a clean cloth to assure proper adhesion of sandpaper.

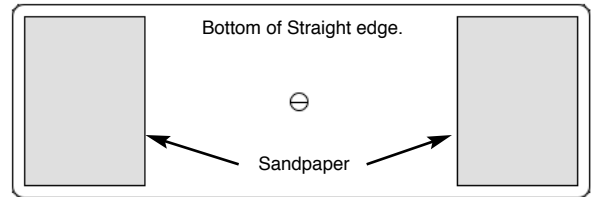

Micro-Mark[®] 340 Snyder Avenue
Berkeley Heights, NJ 07922


Tech Support: 908-464-1094
www.micromark.com MMTechService@att.net

#14162 STAINLESS STEEL STRAIGHT EDGE

To keep straight edge from slipping apply sandpaper to bottom as shown below. Cut sandpaper into 2 pieces.

Peel off backing and press in place.

Note: clean oil residue from straight edge with a clean cloth to assure proper adhesion of sandpaper.

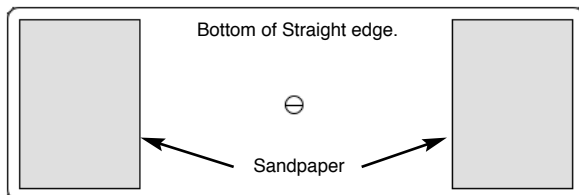

Micro-Mark[®] 340 Snyder Avenue
Berkeley Heights, NJ 07922


Tech Support: 908-464-1094
www.micromark.com MMTechService@att.net

#14162 STAINLESS STEEL STRAIGHT EDGE

To keep straight edge from slipping apply sandpaper to bottom as shown below. Cut sandpaper into 2 pieces.

Peel off backing and press in place.

Note: clean oil residue from straight edge with a clean cloth to assure proper adhesion of sandpaper.

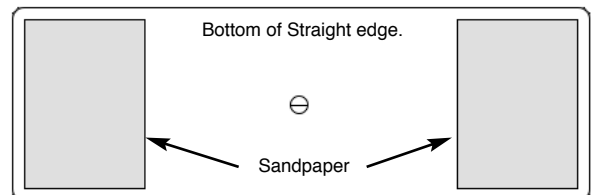

Micro-Mark[®] 340 Snyder Avenue
Berkeley Heights, NJ 07922


Tech Support: 908-464-1094
www.micromark.com MMTechService@att.net

#14162 STAINLESS STEEL STRAIGHT EDGE

To keep straight edge from slipping apply sandpaper to bottom as shown below. Cut sandpaper into 2 pieces.

Peel off backing and press in place.

Note: clean oil residue from straight edge with a clean cloth to assure proper adhesion of sandpaper.

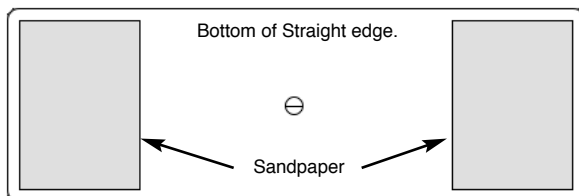

Micro-Mark[®] 340 Snyder Avenue
Berkeley Heights, NJ 07922


Tech Support: 908-464-1094
www.micromark.com MMTechService@att.net

#14162 STAINLESS STEEL STRAIGHT EDGE

To keep straight edge from slipping apply sandpaper to bottom as shown below. Cut sandpaper into 2 pieces.

Peel off backing and press in place.

Note: clean oil residue from straight edge with a clean cloth to assure proper adhesion of sandpaper.

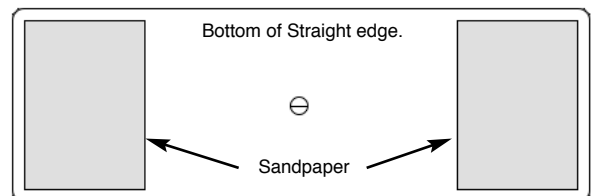

Micro-Mark[®] 340 Snyder Avenue
Berkeley Heights, NJ 07922

Tech Support: 908-464-1094
www.micromark.com MMTechService@att.net