



INSTRUCTIONS FOR TRACK CLEANERS
#82992, #83032, #83033, #83034

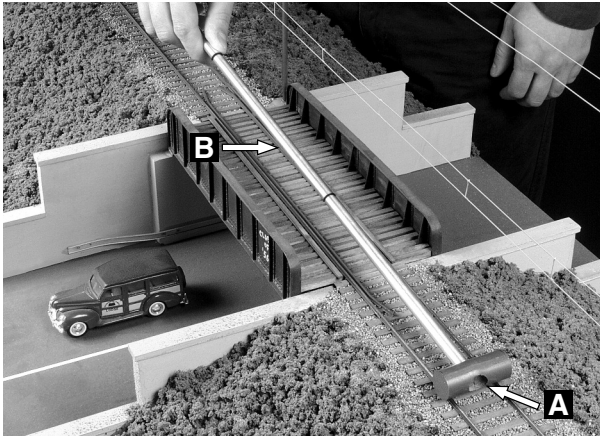

- A. Attach abrasive rubber rod to handle with flat head screw. Note: screw is tight fit in hole – use screwdriver to run it through.
- B. Assemble handle into as long a length as desired. Put the knurled section last.

Micro-Mark® 340 Snyder Avenue • Berkeley Heights, NJ 07922
MMTechService@micromark.com
MM123004


INSTRUCTIONS FOR TRACK CLEANERS
#82992, #83032, #83033, #83034

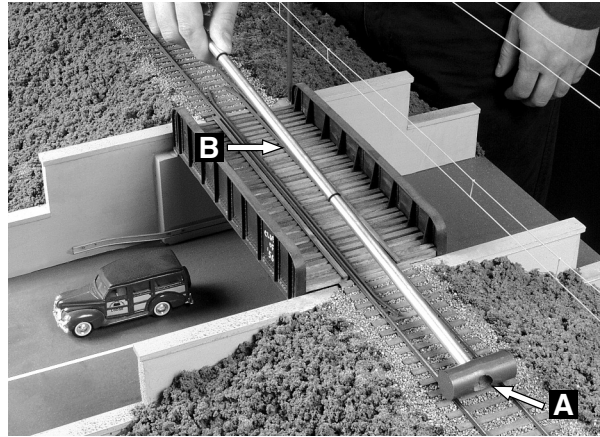

- A. Attach abrasive rubber rod to handle with flat head screw. Note: screw is tight fit in hole – use screwdriver to run it through.
- B. Assemble handle into as long a length as desired. Put the knurled section last.

Micro-Mark® 340 Snyder Avenue • Berkeley Heights, NJ 07922
MMTechService@micromark.com
MM123004


INSTRUCTIONS FOR TRACK CLEANERS
#82992, #83032, #83033, #83034

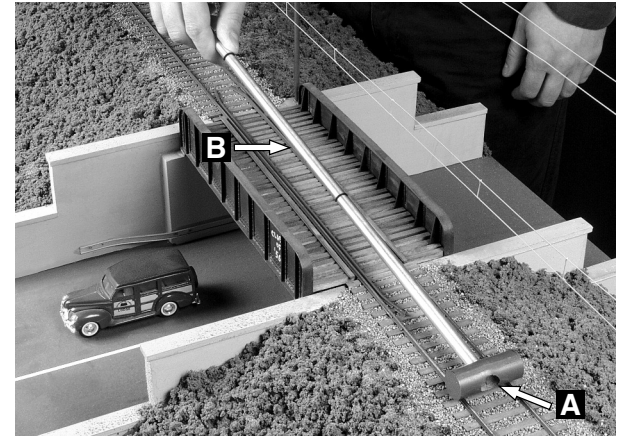

- A. Attach abrasive rubber rod to handle with flat head screw. Note: screw is tight fit in hole – use screwdriver to run it through.
- B. Assemble handle into as long a length as desired. Put the knurled section last.

Micro-Mark® 340 Snyder Avenue • Berkeley Heights, NJ 07922
MMTechService@micromark.com
MM123004


INSTRUCTIONS FOR TRACK CLEANERS
#82992, #83032, #83033, #83034

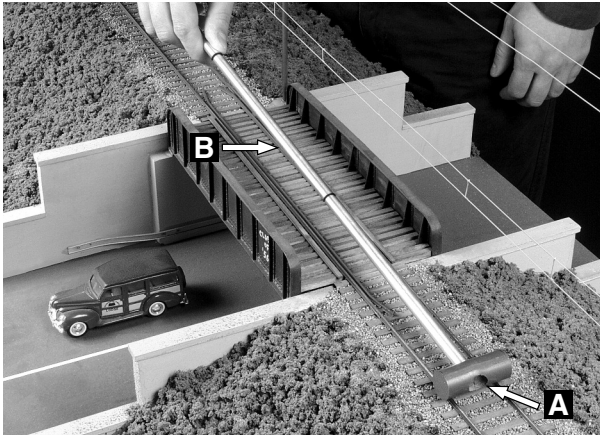

- A. Attach abrasive rubber rod to handle with flat head screw. Note: screw is tight fit in hole – use screwdriver to run it through.
- B. Assemble handle into as long a length as desired. Put the knurled section last.

Micro-Mark® 340 Snyder Avenue • Berkeley Heights, NJ 07922
MMTechService@micromark.com
MM123004


INSTRUCTIONS FOR TRACK CLEANERS
#82992, #83032, #83033, #83034

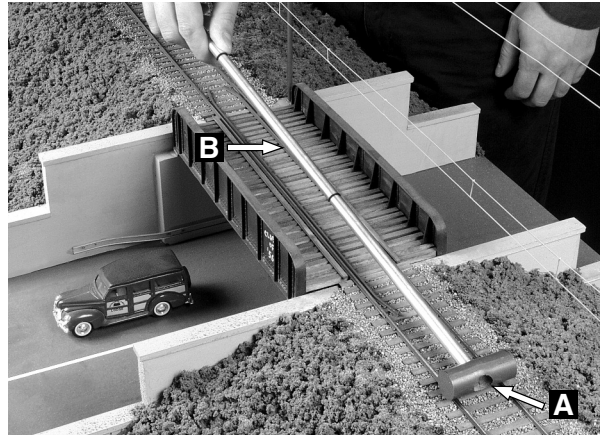

- A. Attach abrasive rubber rod to handle with flat head screw. Note: screw is tight fit in hole – use screwdriver to run it through.
- B. Assemble handle into as long a length as desired. Put the knurled section last.

Micro-Mark® 340 Snyder Avenue • Berkeley Heights, NJ 07922
MMTechService@micromark.com
MM123004

INSTRUCTIONS FOR TRACK CLEANERS
#82992, #83032, #83033, #83034

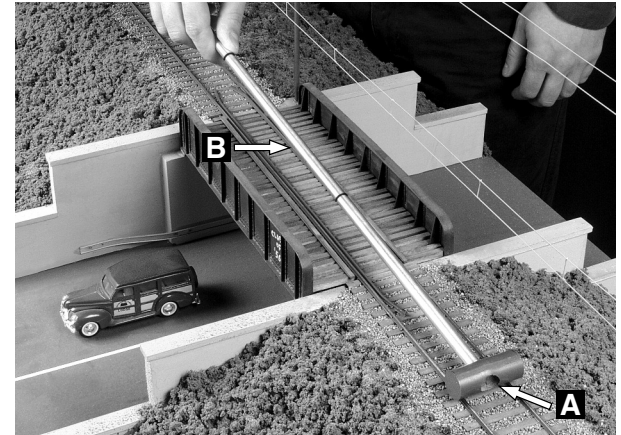

- A. Attach abrasive rubber rod to handle with flat head screw. Note: screw is tight fit in hole – use screwdriver to run it through.
- B. Assemble handle into as long a length as desired. Put the knurled section last.

Micro-Mark® 340 Snyder Avenue • Berkeley Heights, NJ 07922
MMTechService@micromark.com
MM123004